


Part one- create an image file without sysprep

1. Start by searching aomei backupper and download the for servers version
2. In aomei go to tools in the bar on the left then select 'create bootable media'

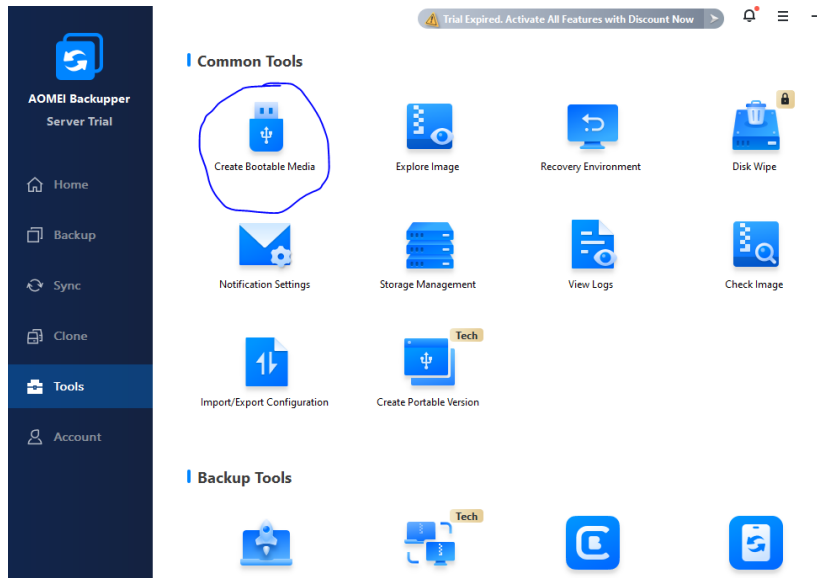


3. Choose the inserted USB boot device that was WinPE on it
4. Once it installs restart your computer and boot to the USB device
5. Choose the option for a disk backup and select disk 0
6. Make the backup go to [\\CNSA-SVR7\images](#)
7. Name your backup something unique and make sure under the options tab that you have compression set to high


Part two- create a sysprep image final

1. Leave the domain by going to settings, system, about, advanced system settings, which will open a new window, in there go to computer name, then change and click


in member of workgroup and put SYSPREP

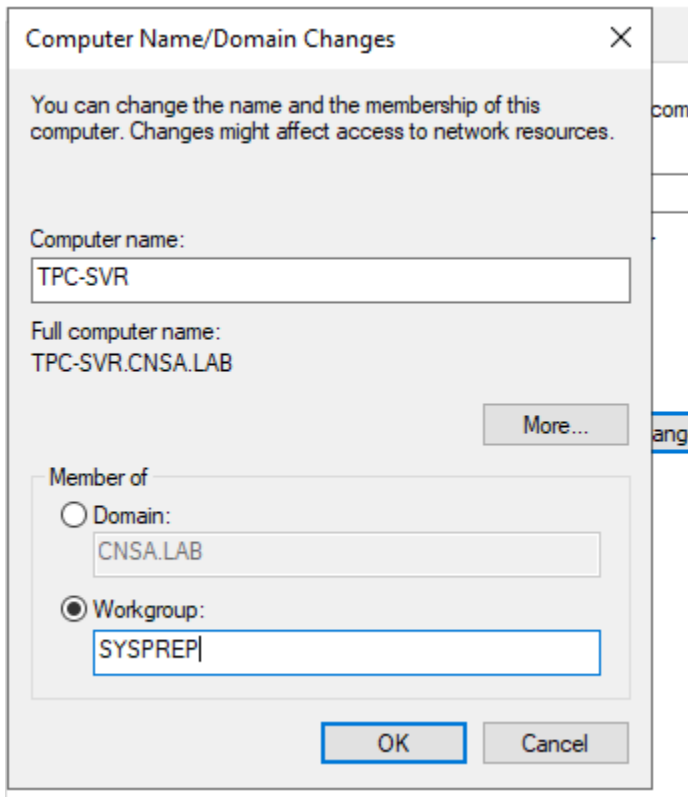

2. Then go into your Sysprep file, file path C:\Windows\System32\Sysprep and open the sysprep program

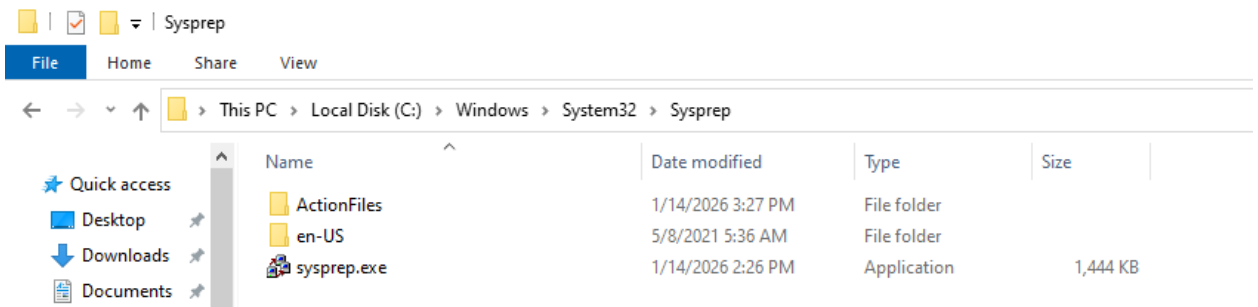

3. In the sysprep window, put OOBE in the top box, click generalize, and choose shutdown under shutdown options

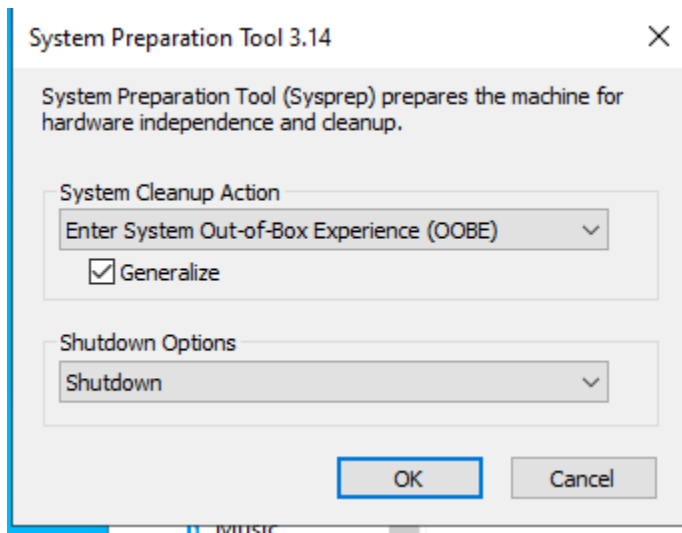

4. SYSPrep might not work for you for some reason. The most likely cause and fix is an app being installed on only one account on your PC. The fix is to go into your installed apps and any app that you don't know if it's on all the PC's accounts and uninstall it.
5. Turn your PC back on and go into WinPE like before
6. Once in there go to backup, then disk backup
7. Set your source as Disk 0 then put your destination as [\\cnsa-svr7\spimages](#) then click ok
8. Set the name to xxx000zz with the xxx being your initials and zz being your computer number
9. Click ok to start the backup

Part 3: Restore your system

1. To restore your system after wiping everything, you have to start by booting to the WinPE again
2. Then choose the restore option on the homepage and click on your image that you uploaded before
3. If you can't find your restore then go through the NAS option and type out the path to the folder that you saved your image to
4. Choose your image and select disk restore for disk0
5. Click through until it lets you resize your partition and size the main partition down to 300 GB
6. Let the image restore fully load, it will take at least half an hour, then sign into your administrator account that has the CNSAcnsa1 password

7. Make sure your computer is back on the CNSA.LAB domain and rename your computer to CNSAXXF-SVR